

Brána se konfiguruje přes www rozhraní a pomocí klávesnice připojeného telefonu. Původní heslo je "admin".

Sip Server a Outbound Proxy: zjistíte na <http://www.802.cz/zjisteni-sip-serveru/>

### Grandstream Device Configuration

**STATUS**   **BASIC SETTINGS**   **ADVANCED SETTINGS**

**MAC Address:** 00.0B.82.03.FE.08

**WAN IP Address:**

**Product Model:** HT286

**Software Version:** Program-- 1.0.5.18   Bootloader-- 1.0.0.21   HTML-- 1.0.0.42   VOC-- 1.0.0.7  
detected NAT type is open Internet

All Rights Reserved Grandstream Networks, Inc. 2004

### Grandstream Device Configuration

**STATUS**   **BASIC SETTINGS**   **ADVANCED SETTINGS**

**End User Password:**  (end user password to configure this device)

**IP Address:**  dynamically assigned via DHCP (default) or PPPoE  
(will attempt PPPoE if DHCP fails and following is non-blank)

**PPPoE account ID:**

**PPPoE password:**

**Preferred DNS server:** . . .

statically configured as:

**IP Address:** . . .

**Subnet Mask:** . . .

**Default Router:** . . .

**DNS Server 1:** . . .

**DNS Server 2:** . . .

**Time Zone:**  GMT+1:00 (Paris, Amsterdam, Berlin, Rome, Vienna, Madrid, Warsaw, Brussels) ▼

**Daylight Savings Time:**  No    Yes (if set to Yes, display time will be 1 hour ahead of normal time)

    

All Rights Reserved Grandstream Networks, Inc. 2004

## Grandstream Device Configuration

STATUS

BASIC SETTINGS

ADVANCED SETTINGS

**Admin Password:**  (admin password to configure this device)

**SIP Server:**  (e.g., sip.mycompany.com, or IP address)

**Outbound Proxy:**  (e.g., proxy.myprovider.com, or IP address, if any)

**SIP User ID:**  (the user part of an SIP address)

**Authenticate ID:**  (can be identical to or different from SIP User ID)

**Authenticate Password:**

**Name:**  (optional, e.g., John Doe)

### Advanced Options:

**Preferred Vocoder:** (in listed order)

choice 1:

choice 2:

choice 3:

choice 4:

choice 5:

choice 6:

choice 7:

**G723 rate:**  6.3kbps encoding rate  5.3kbps encoding rate

**iLBC frame size:**  20ms  30ms

**iLBC payload type:**  (between 96 and 127, default is 98)

**Silence Suppression:**  No  Yes

**Voice Frames per TX:**  (up to 10/20/32/64 for G711/G726/G723/other codecs respectively)

**Layer 3 QoS:**  (Diff-Serv or Precedence value)

**Layer 2 QoS:** 802.1Q/VLAN Tag  802.1p priority value  (0-7)

**Use DNS SRV:**  No  Yes

**User ID is phone number:**  No  Yes

**SIP Registration:**  Yes  No

**Unregister On Reboot:**  Yes  No

**Register Expiration:**  (in minutes, default 1 hour, max 45 days)

**Early Dial:**  No  Yes (use "Yes" only if proxy supports 484 response)

**Dial Plan Prefix:**  (this prefix string is added to each dialed number)

*No Key Entry Timeout:*  (in seconds, default is 4 seconds)

*Use # as Dial Key:*  No  Yes (if set to Yes, "#" will function as the "(Re-)Dial" key)

*local SIP port:*  (default 5060)

*local RTP port:*  (1024-65535, default 5004)

*Use random port:*  No  Yes

*NAT Traversal:*  No  
 Yes, STUN server is:  (URI or IP:port)

*keep-alive interval:*  (in seconds, default 20 seconds)

*Use NAT IP*  (if specified, this IP address is used in SIP/SDP message)

*Proxy-Require:*  (if specified, the content will appear in Proxy-Require header)

*TFTP Upgrade Server:*  .  .  .  (for remote software upgrade and configuration)

*HTTP Upgrade Server:*  (IP address or URL)

*Auto Upgrade:*  No  Yes, check for new firmware every  days (default 7 days)

*SUBSCRIBE for MWI:*  No, do not send SUBSCRIBE for Message Waiting Indication  
 Yes, send periodical SUBSCRIBE for Message Waiting Indication

*Offhook Auto-Dial:*  (User ID/extension to dial automatically when offhook)

*Enable Call Features:*  No  Yes (if Yes, Call Forwarding & Call-Waiting-Disable are supported locally)

*Disable Call-Waiting:*  No  Yes

*Send DTMF:*  in-audio  via RTP (RFC2833)  via SIP INFO

*DTMF Payload Type:*

*Send Flash Event:*  No  Yes (Flash will be sent as a DTMF event if set to Yes)

*FXS Impedance:*  ▾

*NTP Server:*  (URI or IP address)

*Send Anonymous:*  No  Yes (caller ID will be blocked if set to Yes)

*Lock keypad update:*  No  Yes (configuration update via keypad is disabled if set to Yes)

Update

Cancel

Reboot